

# Defender Glove Box Kit

# BRITPART

The quality parts for Land Rovers

## FITTING INSTRUCTIONS

Part Number - DA2603



1. Remove panel bolts



2. Remove clips and styrofoam




3. Cut excessive pins with sharp knife



4. Remove grab handle



5. Put mounting plate in position and bolt down

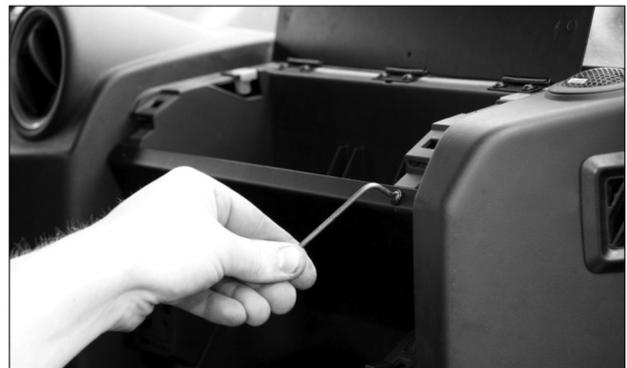

6. Mount front panel (5 screws)



7. Attach glove box cover to mounting plate

